



## tado° setup overview


A compact setup guide on how to install the tado° Smart Thermostat and the tado° Extension Kit in different heating setups.




1

## Room thermostat + Boiler

When the original heating setup consists of only a wired room thermostat and a boiler the original thermostat is simply replaced by the tado° Smart Thermostat using the existing cables in the wall. In case a timer is fitted in the boiler it should be set to constant heating. To inform others that these settings may not be changed, the sticker provided in the package can be used.

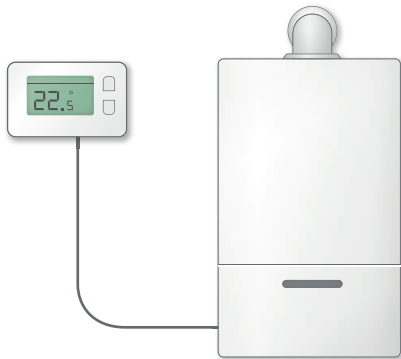

*current set-up*

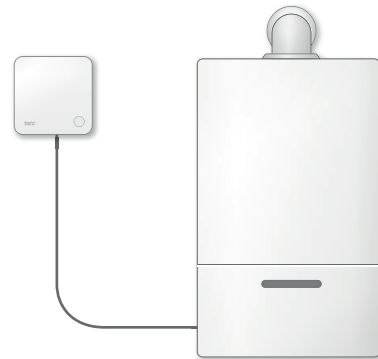


*tado° set-up*

2a

## Room thermostat + Programmer + Boiler

For this heating setup the tado° Extension Kit is optional. When only the tado° Smart Thermostat is installed the original room thermostat is replaced by the tado° Smart Thermostat. The old programmer's heating channel must be set to constant heating. To inform others that these settings may not be changed, the sticker provided in the package can be used.

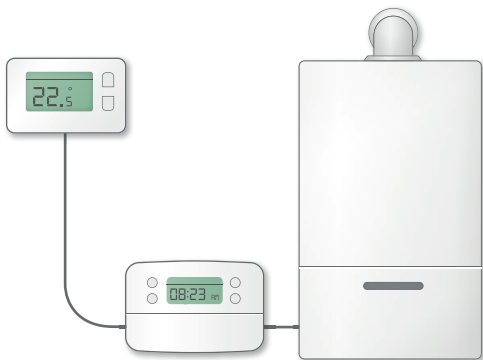

current set-up




**LEAVE HEATING SET TO ALWAYS ON!**  
Your tado° Smart Thermostat turns the heating on and off.

tado° set-up


2b

## Room thermostat + Programmer + Boiler

For this heating setup the tado° Extension Kit is optional. When only the tado° Smart Thermostat is installed the original room thermostat is replaced by the tado° Smart Thermostat. The old programmer's heating channel must be set to constant heating. To inform others that these settings may not be changed, the sticker provided in the package can be used.

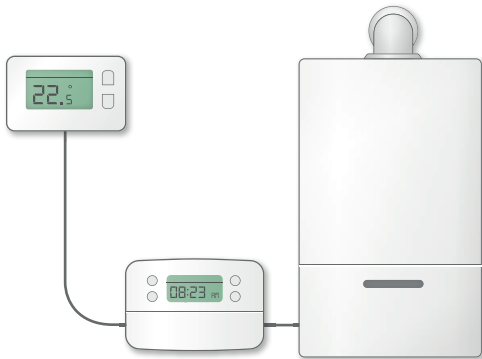

*current set-up*

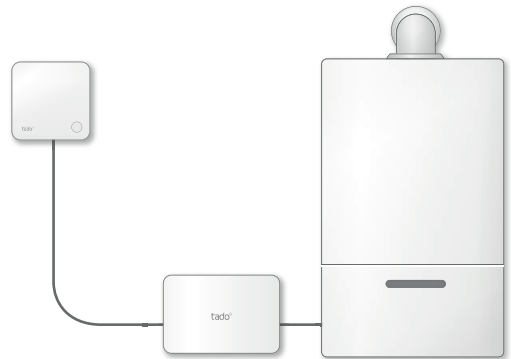

Hot water  
control

*tado° set-up*

3


## Programmer + Boiler

For this heating setup both the tado° Extension Kit and the tado° Smart Thermostat are required and the tado° Extension Kit replaces the old programmer. The tado° Smart Thermostat communicates wirelessly with the tado° Extension Kit and can be placed in any suitable location.

If a timer is fitted in the boiler it shall be set to always heating. To inform others that these settings may not be changed, the sticker provided in the package can be used.



*current set-up*

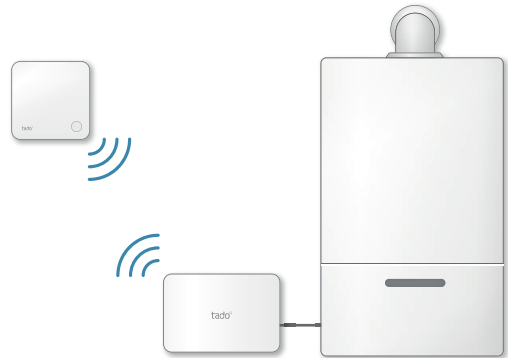

*tado° set-up*


4

## Boiler

For heating setups which only consist of a boiler, both the tado° Extension Kit and the tado° Smart Thermostat are needed. The cable that is supplied with the package is used for connecting the boiler with the tado° Extension Kit. The tado° Smart Thermostat communicates wirelessly with the tado° Extension Kit and can be mounted in any suitable location. If a timer is also in the boiler it shall be set to always heating. To inform others that these settings may not be changed, the sticker provided in the package can be used.



*current set-up*

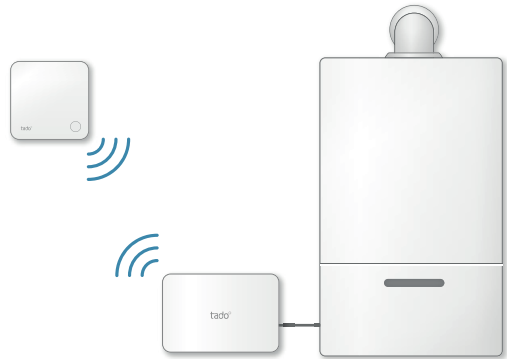


*tado° set-up*


5

## Wireless room thermostat + Wireless receiver + Boiler

This heating setup requires both the tado° Extension Kit and the tado° Smart Thermostat. The tado° Smart Thermostat takes over the role of the wireless room thermostat and can be mounted in any suitable location. The tado° Extension Kit replaces the wireless receiver. If a timer is fitted into the boiler it shall be set to always heating. To inform others that these settings may not be changed, the sticker provided in the package can be used.

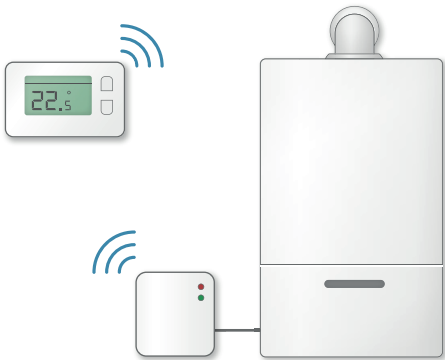

current set-up

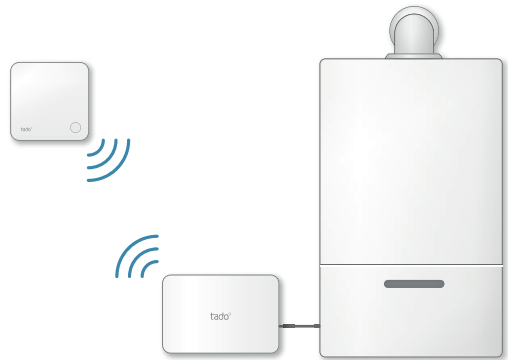


tado° set-up


6

## Wireless room thermostat + Boiler with wireless receiver

For this heating setup the tado° Extension Kit and the tado° Smart Thermostat are needed. In this case the receiver integrated into the boiler has to be removed and the supplied cable is used for connecting the boiler with the tado° Extension Kit. The tado° Smart Thermostat communicates wirelessly with the tado° Extension Kit and can be mounted in any suitable location.

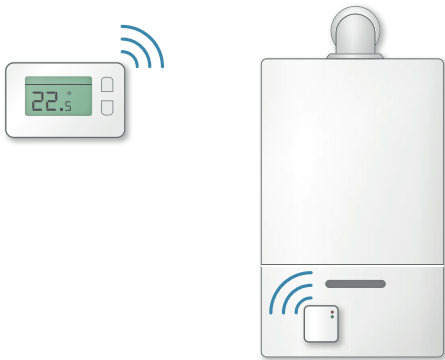

*current set-up*

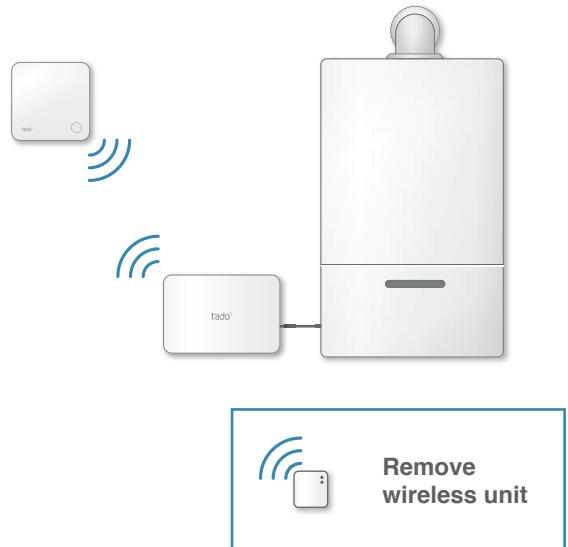

*tado° set-up*




7

## Wireless room thermostat + Wireless receiver + Programmer + Boiler

When tado° is installed to a setup with both a wireless room thermostat and a programmer, the tado° Extension Kit replaces the old programmer. The wires in the receiver have to be bridged, preferably with the luster terminal provided with the Extension Kit. The room thermostat communicates wirelessly with the tado° Extension Kit and can be mounted in any suitable location.




*current set-up*

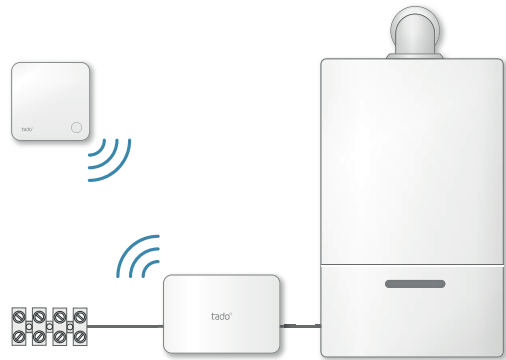



*tado° set-up*

## Wireless room thermostat + programmer + Boiler with integrated wireless receiver

For this heating setup the tado° Extension Kit and the tado° Smart Thermostat are needed. The boiler's integrated receiver has to be removed and tado° Extension Kit replaces the old programmer. The room thermostat communicates wirelessly with the tado° Extension Kit and can be mounted in any suitable location.

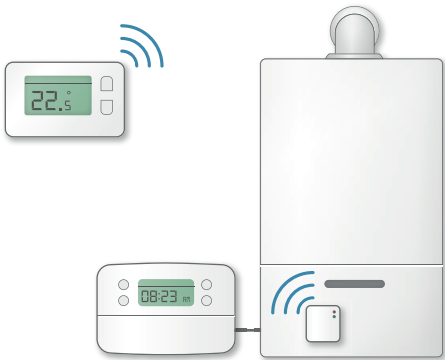

*current set-up*

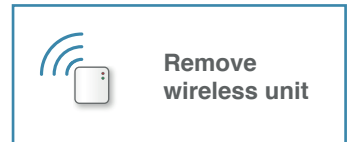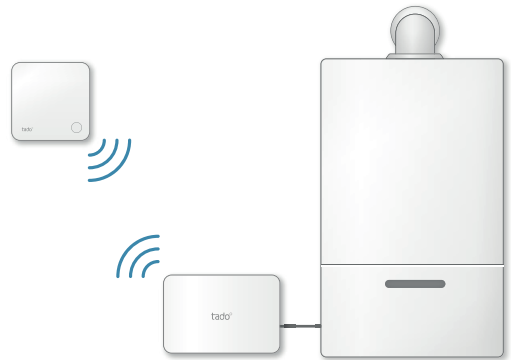

*tado° set-up*